

Quick & Easy PVC Threaded Inserts For Urns

By
Bob Roehrig


I make these from PVC fittings. I like Black since it goes with most woods. Black can be purchased at any supply store selling fittings for manufactured and mobile home. See Business card



Start with a 1 1/2" ABS drain pipe cleanout available from any hardware store.



Mount the female part in expansion jaws. Use a scrapper to remove the little gripper knobs and the raised lettering on the face of the female part. Cut a 1/8 " deep groove about 1/8 " in from the face of the piece to create a flange.

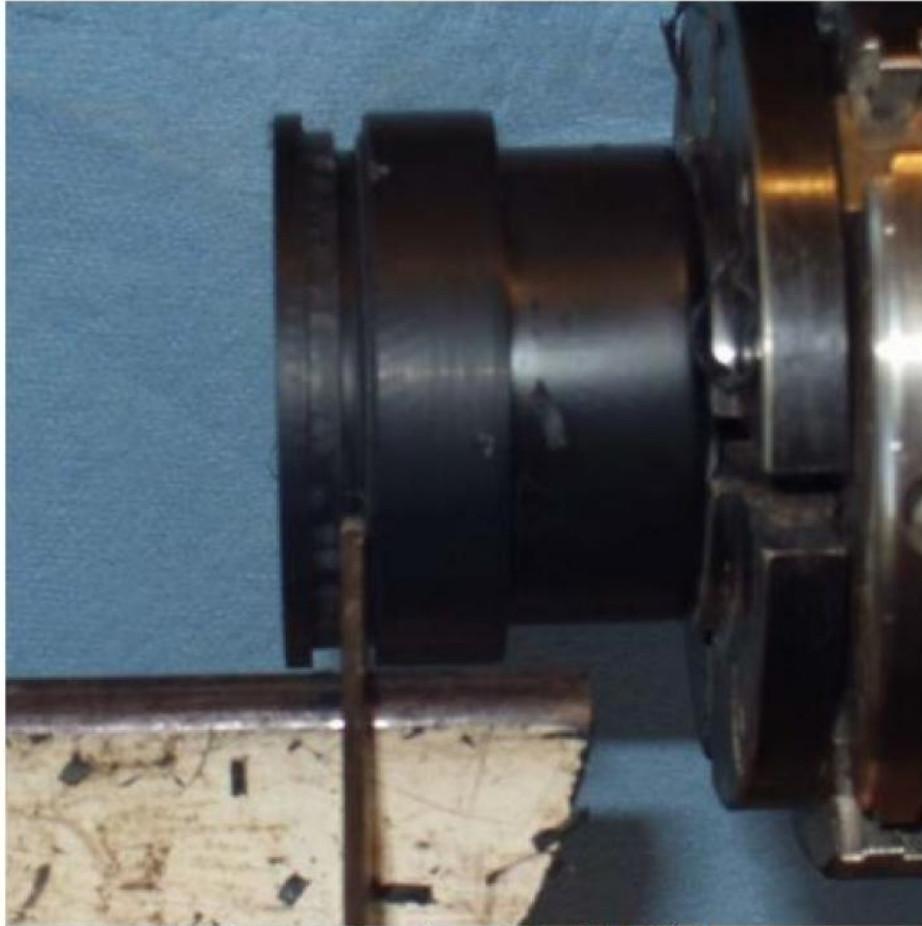

Then part the piece of about 1/4" thick.

MHD MOBILE HOME DEPOT

1216 E Venice Ave
Venice, FL 34285

P) 941.493.7500
F) 941.493.8500 WWW.MOBILEHOMEDEPOT.NET

Mobile Home Depots are located in Punta Gorda, Venice, and Ft. Myers....North & South



Here are the female threads glued into the neck of the urn.



Grip the square end of the male part in a chuck.



Part off about $\frac{1}{4}$ " of the male threads.



Turn a tenon on the underside of the urn lid to fit the male threads. You can then reverse the lid and use the tenon to hold the lid while turning the top side . Glue in place with Epoxy.